

HD Video Capture Box Ultimate™



User's Manual & Quick Start Guide

Full 1-Year Warranty & USA-Based Tech Support

Email Us At: support@clearclick.tech



www.ClearClick.tech

Extend Your Warranty for FREE!

Get a FREE extra year of warranty just by registering your product at: www.ClearClick.tech

Browse All Our Products!

If you're looking for fun, unique, and easy-to-use technology, we've got it! Please visit our website to browse all of our products: www.ClearClick.tech

Safety Precautions

1. Do not disassemble the unit.
2. Please note that the device and/or plugged in USB drives may become very warm during use.
3. Do not operate the unit around water or rain. Do not operate the unit around any kind of machines or appliances (other than computers).
4. Turn off and unplug the unit when not in use.
5. Use only the included accessories with the device.
6. Do not connect high powered, amplified audio outputs to the "in" ports of the device.
7. Follow all copyright laws in your country. You are responsible for your own use of this device.

Full 1-Year Warranty

Your purchase comes with a **full 1-year warranty**. This means that if anything goes wrong with the unit (other than accidental damage on the part of the end user) within the first year of ownership, we will replace the unit for free, 100% at our cost. Contact us at support@clearclick.tech with any issues.

What's In The Box?



a. HD60 Video Recorder b. HDMI Cable c. AV Cable d. Power Adapter
 e. USB Power Cable f. Remote Control g. User's Manual

Device Diagram & Explanation *(continued on next page)*



1. **IR Receiver:** Receives the signal from the remote control
2. **LED indicators:** A blue light means the device is on. A blue blinking light means it is running low on memory. A red blinking light means it is running low on battery & it needs charging immediately. A red light means that the device is off and charging.
3. **Panel Buttons:**
 - Power:** A single press will turn on/off the display screen. Hold down for several seconds to turn off normally. To force device shutoff, hold down longer than 10 seconds.
 - Menu/Back:** Press this button to enter or exit menus.
 - Vol+/-, Mic+/-:** Press these buttons to control Speaker/Microphone volumes.
 - Mode:** Press this button to switch among Record/Photo/Playback preview. Hold down longer to delete a recording in playback preview.
 - Rec/Stop:** A single press will start/stop recording in recording mode. Hold down longer to capture a snapshot.
4. **SD card slot:** insert an SD card for recording or playback.
5. **DC input 5V/2A:** power input for USB power adapter
6. **Headphone/Microphone Jack:** input for microphone or output for headphones
7. **AV IN:** input jack for RCA input (from VCR, camcorder, etc.)
8. **HDMI IN:** HDMI input port.
9. **HDMI OUT:** HDMI output port.
10. **USB:** plug in a USB hard drive or USB flash drive.
11. **USB TO PC:** micro USB port for connection to PC/Mac, transferring recordings to PC/Mac, or live streaming (PC only).
12. **LCD Screen:** LCD screen for preview/playback.

Remote Control Diagram & Explanation



: LCD Screen on/off

Rec: Press to start recording

Stop: Press to stop recording/playback

: Adjust Microphone volume

: Adjust Speaker volume

: Control cursor in menu state

OK: Choose a selection in menu state

Menu: Show the main menu or exit menu

Back: Press to exit menu

: Capture a photo in record/photo preview state

: Mute the speaker

: Mute the microphone

Playback: Go to playback menu directly

Source: Select input video source (HDMI/AV)

Schedule: Schedule a once/daily/weekly recording

SD/USB: Select the default storage device to SD card or USB disk

Mode: Press to switch among Record/Photo/Playback preview

Long press to delete a recording in playback preview

Language: Press to change the language

Record Quality: Press to change the record quality



**VERY IMPORTANT - PLEASE READ
BEFORE USING THIS DEVICE!**



Many HDMI video sources are encrypted with content protection called “HDCP,” even if the content is not copyrighted. Complying with laws, the HD Capture Box Ultimate does not disable or override content protection.

**** Therefore, if you simply plug in a content-protected HDMI video source to the HD Capture Box Ultimate, it will not detect a signal or allow you to record. ****

However, there are low-cost HDMI splitters available that disable “HDCP.” Passing a HDMI signal “through” either of these splitters first, HDCP sources could be recorded:

1. Techole HS306:

www.amazon.com/dp/B07DQBY5TX

2. ViewHD VHD-1X2MN3D:

www.amazon.com/dp/B004F9LVXC

Important Disclaimer: To clarify, we are not recommending or condoning the use of HDMI splitters, or recommending that you record content-protected HDMI video sources. We are simply saying that an HDMI splitter makes it theoretically possible, but this information is solely for educational purposes. You are legally responsible for your own use of HDMI splitters with this device. Please follow all the copyright laws in your country.

Quick Start Guide – Normal Recording Mode

1. **IMPORTANT: Read the note page #6 before continuing!**

2. **Connect the power adapter** to the DC input jack (see #5 from device diagram) of the HD Video Capture Box. Plug in the power adapter to any power outlet.

3. **Turn on the HD Video Capture Box** by holding down the power button for several seconds.

4. Using the included HDMI cable, **connect your video source** (gaming system, DVD player, etc.) to the HD Video Capture Box. Plug it into the HDMI IN port (see #8 from the device diagram).

NOTE: If you are connecting a VCR, camcorder, etc., use the AV cable to plug into the AV IN port (#7). In the device main menu, choose “AV” under “Video Source.”

5. If there is a signal from the HDMI cable, **you should see video on the LCD screen.** If you want the HDMI signal to “pass through” to your TV, use another HDMI cable to connect your TV to the HDMI OUT port (#9).

6. **Plug in a USB flash drive or hard drive** into the USB port (#10) on the HD Video Capture Box, or insert an SD card into the SD card slot (#4) on the HD Video Capture Box. **NOTE:** We highly recommend starting with a fresh, brand-name USB drive. We recommend “SanDisk” brand USB/SD drives. For best results, use a drive that is 128 GB or smaller.

7. **Press the “Record” button** on the HD Video Capture Box.

8. **To stop recording**, press the “Record” button again. (Or to pause recording, press the “OK” button. To resume recording, press the “OK” button again.)

9. **To play back recordings** on your device, press the “Mode” button to go to “Playback” mode. You can press ▲▼ to adjust the volume, or ◀▶ to fast forward/rewind through the recording.

10. To play back or transfer recordings to your PC or Mac, remove the USB drive or SD card from your HD Video Capture Box and plug it into your computer. Browse the drive and go to the “video” folder. You will find your recordings in this folder.

How To Schedule Recordings

You can schedule a recording by pressing “**Schedule**” on the remote, or by selecting “**Schedule Recording**” in the menu of the HD Video Capture Box.

NOTE: Make sure your device is set to the right time and date before scheduling. Also, we recommend leaving the device plugged in with the power adapter when a recording is scheduled.



On the above menu, the device allows you to set up a daily recording, a one time recording, or a weekly recording.

Start Time/End Time: set the desired time of start/stop recording.

Day of Week Checkmarks: set the desired week days of schedule.

Confirmation: Choose to save the schedule settings.

Cancel: Choose to exit without saving the schedule settings.

Quick Start Guide – Live Streaming with OBS (PC Only)

1. **IMPORTANT: Read the note page #6 before continuing!**

2. Connect a micro USB cable (not included) to the “USB TO PC” port on the HD Video Capture Box. (Must be a good quality cable, such as this one: www.amzn.com/B01GJC4WRO). Plug the other end into your PC. (Macintosh not supported.)

3. The menu below will appear on the HD Video Capture Box. Select “PC Streaming Mode” and press “OK.”



4. Download & install the OBS software from www.OBSproject.com.

5. Open the OBS software.

6. Click Scenes → Add Scene→ and enter a name.

7. Click Sources → Add Video Capture Device→ Device Selection, and select D720 UVC Camera and D720 UAC Audio.

8. Click Settings → Audio → Desktop Audio Device, and choose your PC's

speaker/sound card.

9. Click “Preview Stream” to preview your HDMI video source.

10. Now you can start live streaming your HDMI video source.

Device Specifications

Supported Video Resolutions	
Input	1920x1080 (60p) 1920x1080 (50p) 1920x1080 (30p) 1920x1080 (25p) 1920x1080 (24p) 1920x1080 (60i) 1920x1080 (50i) 1280x720 (60p) 1280x720 (50p) 720x480 (60i/p) 720x576 (50i/p)
HDMI Output	1280x720 (60p) for playback / Loop-through up to 1920x1080
Recording	Local Recording: 1920x1080 (60p). 1280x720 (60p). 720x480 (60p). PC Recording: 1920x1080 (30p). 1280x720 (60p).
Output format	MP4 (H.264)
CVBS standards (input)	NTSC, PAL
Input signals	HDMI, AV, MIC, USB
Output signals	HDMI, Micro USB, Headphones, Speakers
Supported file system	FAT32, NTFS, exFAT
Recording capacity	Maximum 4GB per file
Recording Bitrate	30/22/18/12/4Mbps in various record qualities
Maximum storage capacity	128GB (USB Flash drive), 128GB (SD card)
Power supply	DC 5V, 2A

Troubleshooting (FAQ's)

1. My video doesn't show up on the LCD / the LCD is black.

First, see the important notice on page #6 (HDMI sources only).

Please make sure the HDMI or AV source input is connected properly.

Make sure the "Video Source" setting in the device menu is set correctly.

Make sure your HDMI cable is plugged into the "IN" port, not the "OUT" port.

2. I made a recording, and when I plug in my USB/SD drive to my computer, the drive and/or file is corrupted.

We recommend starting with a new, unused USB/SD card that is "SanDisk" brand. USB Flash Drives & SD cards should be 128 GB or smaller. SD cards should be rated "Class 10" or higher.

If you are unable to use a new drive/card, please re-format your drive using your computer, and make sure the format is a "Full Format," not a "Quick Format." Then try recording again.

3. My SD card or USB drive isn't recognized by the device.

Please try another SD card or USB drive. We recommend using a fresh SD card or USB drive that has not been used in other devices before. For microSD cards, please make sure a good quality SD adapter is used.

4. The device freezes.

Hold down the power button for a full 10 seconds to shut down the device and restart.

5. My device prompted me to format my USB/SD card, so I did. Now my Mac won't read the drive.

Please format your USB/SD card on your Mac first, and then insert it into your HD Video Capture Box.

Here's how to format your USB/SD card on your Mac...

1. In Finder, navigate to Applications -> Utilities -> Disk Utility.
2. On the left, click on your USB/SD drive.
3. Click the "Erase" button.
4. Next to "Format," select MS-DOS FAT32.
5. Click "Format."

Remove the USB/SD card and insert it into your HD Video Capture Box.

6. The device isn't recording.

First, [see the important notice on page #6](#) (HDMI sources only).

Please make sure the proper source input is selected. (See #1)

Please make sure a storage device (USB drive or SD card) is inserted.

7. No sound from speaker or recording.

Please make sure the volume is unmuted & speaker/headset volume is properly adjusted. Use the arrow keys on the device to adjust.

8. My recordings don't show up on my PC or Mac when I plug in the device by USB.

With your SD card or USB drive inserted, connect the HD Video Capture Device to your PC or Mac using a micro USB cable (not included). Make sure you select "PC Storage Mode" on the device.

9. Live streaming to PC doesn't work.

Make sure you are using a microUSB cable (not included) to plug into the "USB TO PC" port on the device. (Must be a good quality cable, such as this one: www.amzn.com/B01GJC4WRO). Make sure you select "PC Streaming Mode" under USB Mode. Please make sure you can see D720

UVC Camera, D720 UAC Audio device in your PC Device Manager. Make sure D720 is selected as Video/Audio input in the streaming software.

10. The device isn't working with an external USB hard drive.

Since USB hard drives will consume more power than USB flash drives, the embedded battery of the HD Video Capture Box may not provide enough power. Thus, please connect the HD Video Capture Box to the power adapter before connecting the USB hard drive. If the hard drive came with a power adapter, please make sure it is plugged in separately.

11. When live streaming or recording directly to the PC, the audio/video is not synchronized.

The PC streamlining/direct recording feature is very resource heavy. In other words, you may need a faster PC with a better graphics card to use this feature, such as a gaming PC.

12. The audio and video seems to be out of sync on the device screen.

The recorded files should not have this issue. Please play back the recorded files on a PC or output to an HDMI device in Playback mode.

If your files still have this issue, please try a new USB 3.0 flash drive (128 GB or smaller). We recommend "SanDisk" brand drives.

13. The recorded files don't play back smoothly on my PC or Mac.

The recorded files may be very large in size. Try playing them back on a PC or Mac with a better CPU and graphics card.

14. I have a question that isn't listed here, or need further support.

No problem! Please email us at support@clearclick.tech with your order number, and we will get back to you as soon as possible.

