

# ClearClick® Retro Jukebox Speaker

Quick Start Guide & User's Manual



**Full 5-Year Warranty +**

**FREE USA-Based Tech Support**

If you have any issue or question regarding this product, **contacting us directly** is the fastest way to resolve the issue. We are ClearClick®, a small USA-based business, and we stand behind our products with a full 5-year warranty & free USA tech support. If you have any issues with our product, **please contact us at [support@clearclick.tech](mailto:support@clearclick.tech)**.



[www.ClearClick.tech](http://www.ClearClick.tech)

## **Register Your Product & Browse Our Products**

Thank you for your purchase! Make sure you register your product & check out our other unique & easy-to-use technology at:

[www.ClearClick.tech](http://www.ClearClick.tech)

## **Safety Precautions**

- 1) Do not disassemble the unit.
- 2) Do not operate the unit around water or rain.
- 3) Do not operate the unit around any kind of machines or appliances (other than computers).
- 4) Turn off and unplug the unit when not in use.
- 5) Do not allow young children to use this device.

## **Thank You!**

Thank you for your purchase of the ClearClick® Retro Jukebox Speaker (Model Number VB20)! We appreciate your business.

At ClearClick®, we try to make our technology as clear to understand and use as possible. But if you need assistance with anything, just email our FREE USA-based tech support at: [support@clearclick.tech](mailto:support@clearclick.tech).

(Make sure you explain your issue in detail and tell us that you're using our ClearClick® Retro Jukebox Speaker (Model Number VB20). Our USA-based tech support team

members will normally reply to you within 24-48 business hours -- usually less.)

To get started with your ClearClick® Retro Jukebox Speaker (Model Number VB20), please see the quick start [guide](#) on the following pages.

## What's In The Box

- ClearClick® Retro Jukebox Speaker (VB20) with Bluetooth & Aux-In
- Power Cord
- User's Manual

**NOTE:** If you believe you are missing any parts, or if you received a part that is broken, please contact us directly at [parts@clearclick.tech](mailto:parts@clearclick.tech). For all other technical issues or support, please contact us at [support@clearclick.tech](mailto:support@clearclick.tech).

**MORE PRODUCTS YOU MIGHT LIKE FROM**



**Cassette2USB Converter  
(Convert Audio Tapes To Digital)**



**QuickConvert Photo, Slide, &  
Negative Scanner**



**Video2Digital Converter (Convert  
Video Tapes To Digital)**



**Film2USB Converter (Slide & Negative  
Scanner)**



**Retro Wooden Radio with Bluetooth**

**LEARN MORE & BUY NOW AT**

**[WWW.CLEARCLICK.TECH](http://WWW.CLEARCLICK.TECH)**

## **QUICK START – Playing Music via Bluetooth**

1. Using the power cable, connect the speaker to a power outlet.
2. Hold down the Power button for about two seconds.
3. (If you previously had an aux-in cable connected to the speaker, disconnect it.)
4. On your phone, tablet, or other Bluetooth device, scan for Bluetooth devices and connect to the one named “Jukebox.”
5. The blue LED will become solid blue once the speaker is connected to your Bluetooth device.
6. Start playing music on your Bluetooth device.
7. To increase the speaker volume, press and hold the “VOL/NEXT” button. To decrease the volume, press and hold the “VOL/PREV” button. (NOTE: You may need to adjust the volume on your phone or Bluetooth device as well.)
8. To turn on/off the lights of the jukebox speaker, press the power button. To turn off the speaker entirely, press and hold the power button.

## **QUICK START – Playing Music via AUX IN**

1. Using the power cable, connect the speaker to a power outlet.
2. Hold down the Power button for about two seconds.
3. Using a 3.5mm aux cable, connect your phone, tablet, or MP3 player to the back of the jukebox (to the aux-in port).
4. Start playing music on your phone, tablet, or MP3 player.
5. To increase the speaker volume, press and hold the “VOL/NEXT” button. To decrease the volume, press and hold the “VOL/PREV” button. (NOTE: You may need to adjust the volume on your phone or Bluetooth device as well.)
6. To turn on/off the lights of the jukebox speaker, press the power button. To turn off the speaker entirely, press and hold the power button.

## **Frequently Asked Questions (FAQ)**

### **1. I can't connect the speaker to Bluetooth on my phone or tablet.**

A. Make sure the speaker is turned on. Make sure you have disconnected any aux-in cable, if previously connected.

B. If you have previously connected the speaker to any other Bluetooth devices, disconnect those from the speaker, or turn off Bluetooth on those devices.

C. Test the speaker with another phone or Bluetooth device.

### **2. There's another problem or issue with my speaker.**

If you have any issue or question regarding this product, please contact us directly to resolve the issue. We are ClearClick®, a small USA-based business, and we stand behind our products with a full 5-year warranty & free USA tech support. If you have any issues with our product, please contact us at [support@clearclick.tech](mailto:support@clearclick.tech).



[www.ClearClick.tech](http://www.ClearClick.tech)