

Cassette2USB™ 2.0 (Second Generation) Cassette Tape Player & Converter



User's Manual & Quick Start Guide

2-Year Warranty & USA-Based Tech Support

For tech support, email us at: support@clearclick.com

Extend your warranty to 3 years for free by registering at:

www.ClearClick.com/register/



www.ClearClick.com

Browse All Our Products!

If you're looking for fun, unique, and easy-to-use technology, we've got it! Please visit our website to browse all of our products: www.ClearClick.com

Safety Precautions

1. Do not disassemble the unit.
2. Please note that the device and/or plugged in USB drives may become very warm during use.
3. Do not operate the unit around water or rain. Do not operate the unit around any kind of machines or appliances (other than computers).
4. Turn off and unplug the unit when not in use.
5. Use only the included accessories with the device.
6. Do not connect high powered, amplified audio outputs to the "in" ports of the device.
7. Follow all copyright laws in your country. You are responsible for your own use of this device.

2-Year Warranty

Your purchase comes with a **2-year warranty**. This means that if anything goes wrong with the unit (other than accidental damage on the part of the end user) within the first year of ownership, we will replace the unit for free, 100% at our cost. Contact us at support@clearclick.com with any issues.

Extend Your Warranty To 3 Years For FREE!

Get a FREE extra year of warranty just by registering your product at: www.ClearClick.com/Register/

What's In The Box?


- Cassette2USB™ 2.0 Tape Player & Converter
- USB Power Cable
- 8 GB USB Flash Drive
- Earbuds
- Quick Start Guide
- User's Manual

Parts Broken or Missing?


Please contact parts@clearclick.com, and we will get right back to you.

Quick Start Guide

STEP #1. Power the device using the included USB cable and a 5V USB wall adapter (not included).

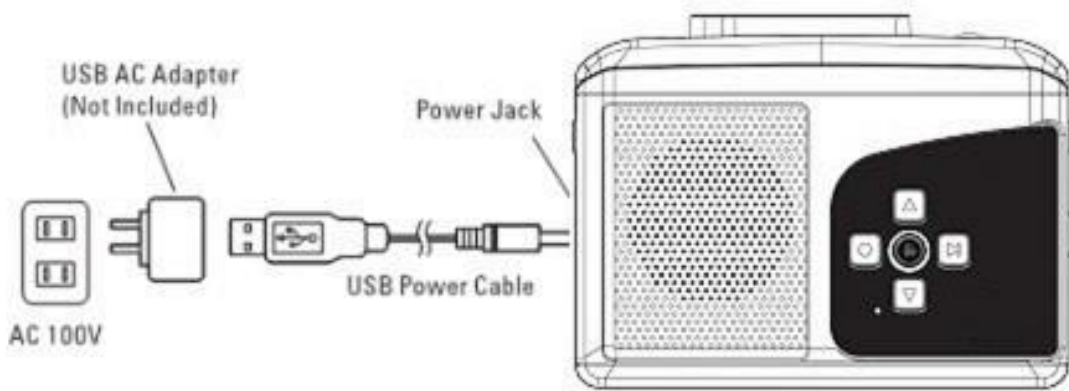

Alternatively, you can use 2 AA batteries (not included) to power the cassette player.

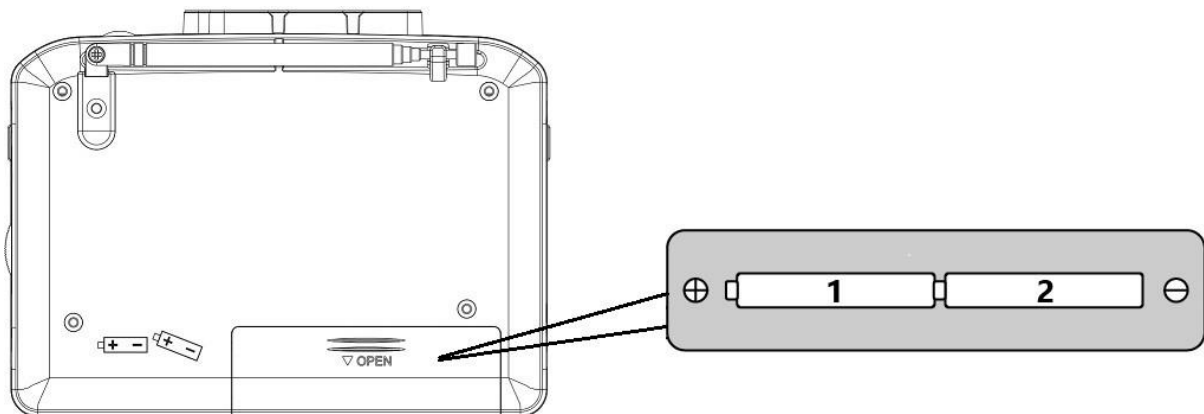

STEP #2. Plug in a USB flash drive into the USB port on the cassette converter. (32 GB or less; exFAT or FAT32 format only). An 8 GB USB drive is included with the device.

STEP #3. Insert an audio cassette tape into the player and press the “Play” button on the top of the device.

STEP #4. Turn up the volume knob.

Important: If you are converting to MP3, the cassette player will record at the volume set to. To record quietly, simply plug in the included earbuds, but leave the volume turned up.

STEP #5. Start recording by pressing the Record● (left) button. To stop recording, press the same Record (left) button. The device will save your MP3 file(s) into a folder called “TAPEMP3” on your USB flash drive.

For advanced options, including track splitting or auto track splitting, see the subsequent sections of this manual.

MANUAL Recording Mode – What Is It?

By default, the device is in MANUAL recording mode when it starts up. The device's front LED will be **GREEN** when the device is in manual mode.

In manual recording mode, the device will save the recording as one digital MP3 audio file, unless you manually split the tracks while you are recording.

To manually split into tracks while recording, you may press the Down ▼ button on the front of the device with a single press to start a new file/track.

AUTO Recording Mode – What Is It?

In auto recording mode, the device will try to detect when one track ends and another begins. It will save each track as an individual MP3 file.

To switch to AUTO recording mode, hold down the Down ▼ button on the front of the device until the LED light turns **BLUE**.

Now, once you start recording, the file will automatically split up the tracks into individual files while it records.

How To Play Back Recorded Files on the Device

To play back recorded MP3 files on the cassette tape player itself, first make sure you have stopped playing a tape on the device. Also, make sure you have stopped recording by pressing the Record● (left) button.

Then, simply press the Playback▶ (right) button. Turn the volume on the device. The device will start playing the first recorded file. To skip to the previous or next track, press the Up▲ or Down▼ buttons.

How To Transfer Recorded MP3 Files To PC/Mac

To transfer your recorded MP3 files to your PC or Mac, first make sure you have stopped recording by pressing the Record● (left) button.

Then, simply unplug the USB flash drive from the device, and plug it into your PC or Mac.

Browse the USB flash drive contents. Your recorded files will be on the USB flash drive inside the “TAPEMP3” folder.

To transfer your files to your PC or Mac, simply click and drag the files to a folder on your PC or Mac.

Troubleshooting / FAQs

1. There is no sound in the recorded MP3 files.

Make sure you have turned up the volume knob on the device during recording, because the device will record at whatever volume level you have it set to.

If you wish to record silently, simply plug in the included earbuds, but keep the volume turned up.

2. The recorded files are not saving correctly or are corrupted.

A) Make sure you have used the included USB flash drive or one that is 32 GB or smaller (FAT32/exFAT only).

B) Make sure you have pressed the Record button to stop recording before removing the USB flash drive.

C) Make sure you have checked in the “TAPEMP3” folder on the USB flash drive.

3. Auto Recording Mode is not recording/splitting the tracks on my tape correctly.

This mode works by detecting the level of music. You may encounter the following two issues when recording in Auto Recording Mode:

A) If there is a long pause during the song, the device may *think* it is detecting two different songs and split the recording into two separate files. In this case, we recommend using Manual Recording Mode.

B) If the pause between two songs is too short, the device *think* it is one song and save both songs as one file. In this case, we recommend using Manual Recording Mode.

4. I need a further support!

No problem! We're ready to help. Please email us at support@clearclick.com and we'll get back to you within 24-48 hours, usually much sooner!

(NOTE: If you don't receive a response, check your "SPAM" folder).

Please include as much detail as possible, including what product you're using, what kind of computer you have, and a detailed description of the problem.

Technical Specifications

Supported Format: MP3

Recording Bitrate: 160 Kbps

Storage: Max. 32GB USB drive (FAT, FAT32 and exFAT only; NTFS not supported)

Battery: AA * 2 (Optional; Not Included)

Power Supply: USB 5V

Speaker: 8Ω 1W

Output power: Max. 1W

Frequency response: 100Hz – 18KHz

Dimensions: 122 x 91 x 39mm

Weight: 200g (without batteries and tape)



www.ClearClick.com

support@clearclick.com